



1. Install the **CSR BlueSuite 2.5.8** software on your PC(remember its installation path).




2. **Restart** your PC after it is successfully installed.
3. Connect Priva IIA to PC via Micro data/charging cable(included) => switch button to ON => press and hold MFB for 15s, **BLUE** LED is on, now Priva IIA enter DFU mode.

4. Upgrade Priva IIA software.


- 1) Find **“CSRBlueSuite 2.5.8”** from its installation path on your computer, select **“DFUWizard”** and click.

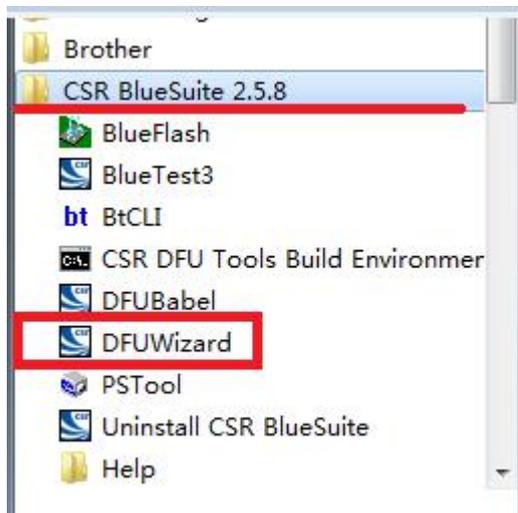


- 2) Click Next.

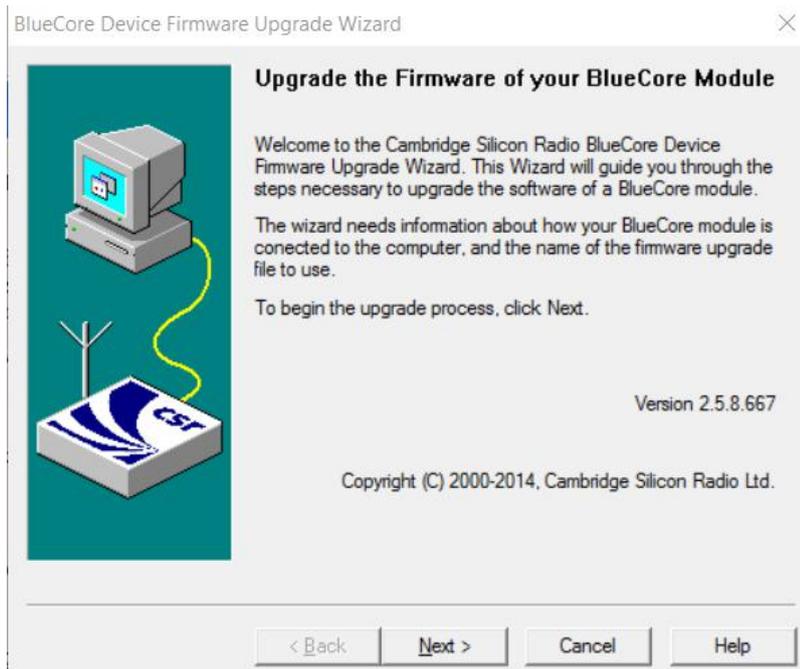


3) Select the first one as below and click Next.

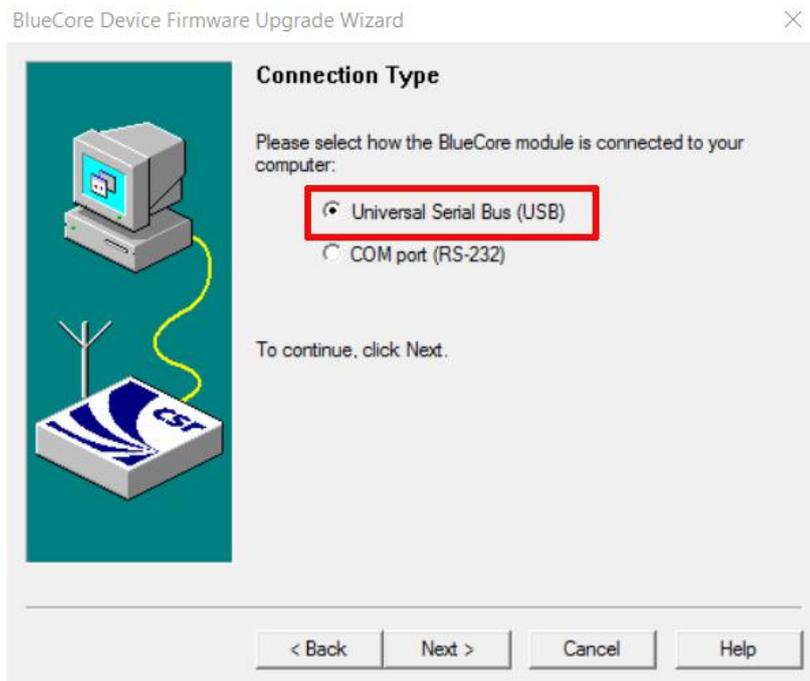


4) Select the second one as below and click Next.

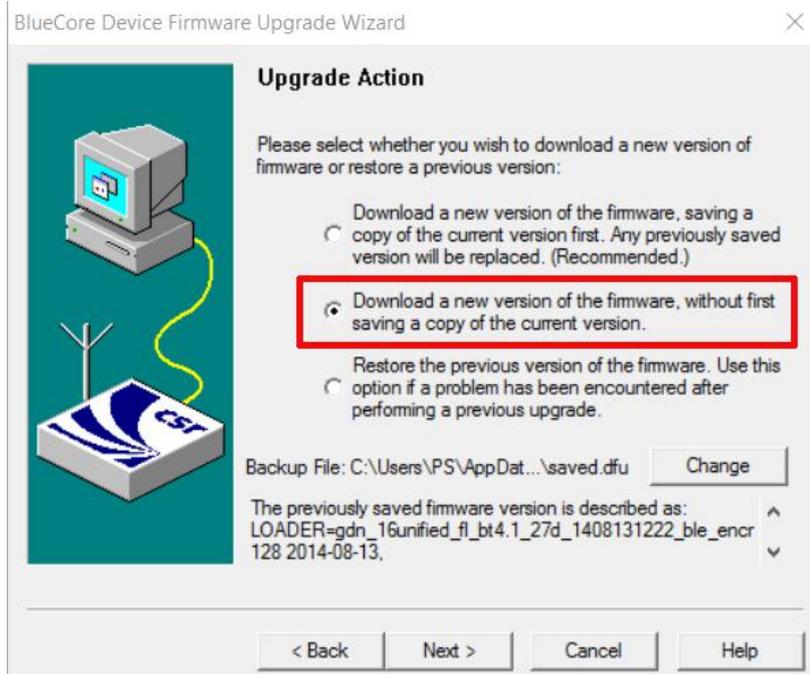


- 5) Click "Browse", select "Priva IIA – audio cut in and out.dfu", then click "Next".

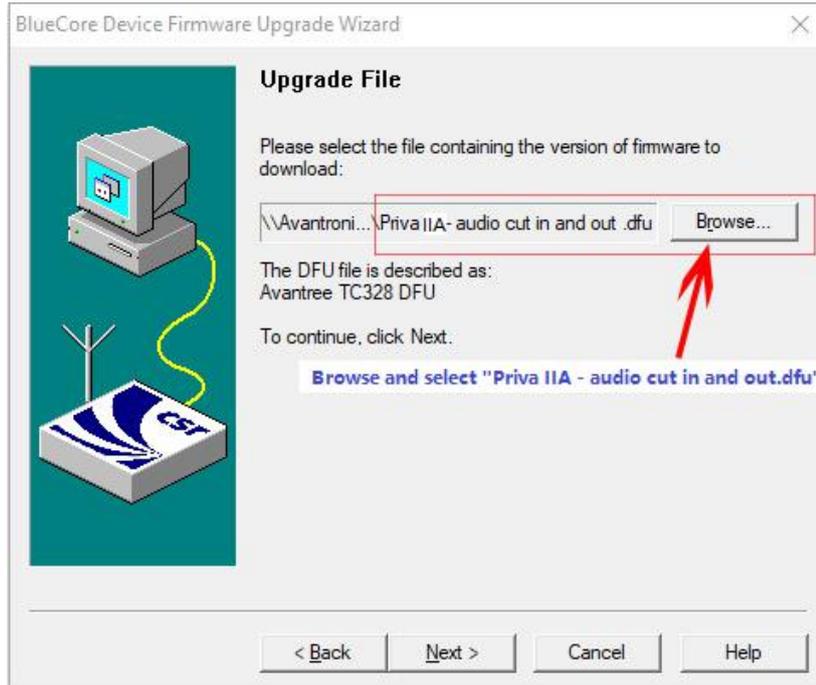


- 6) Click "Next"

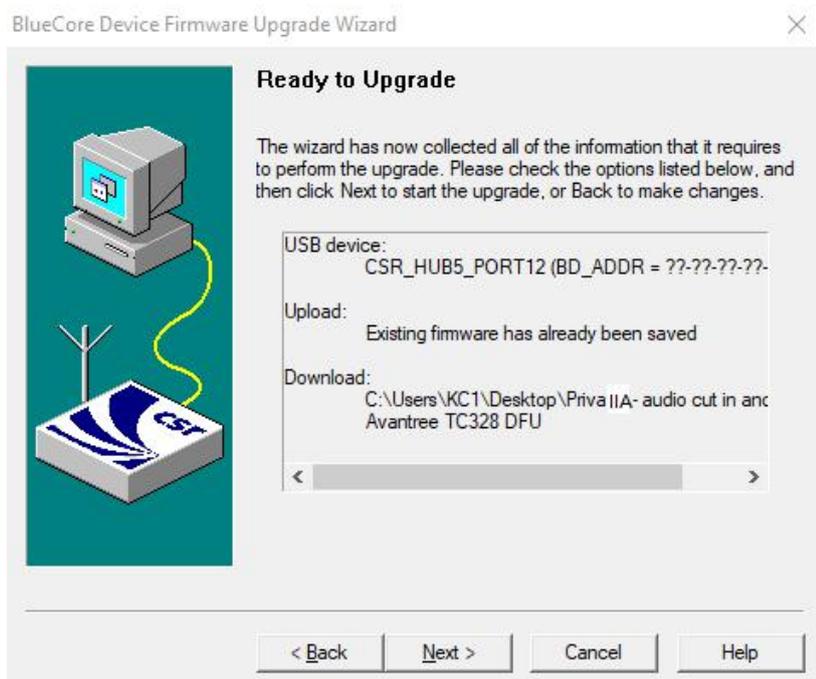

7) Waiting for upgrading

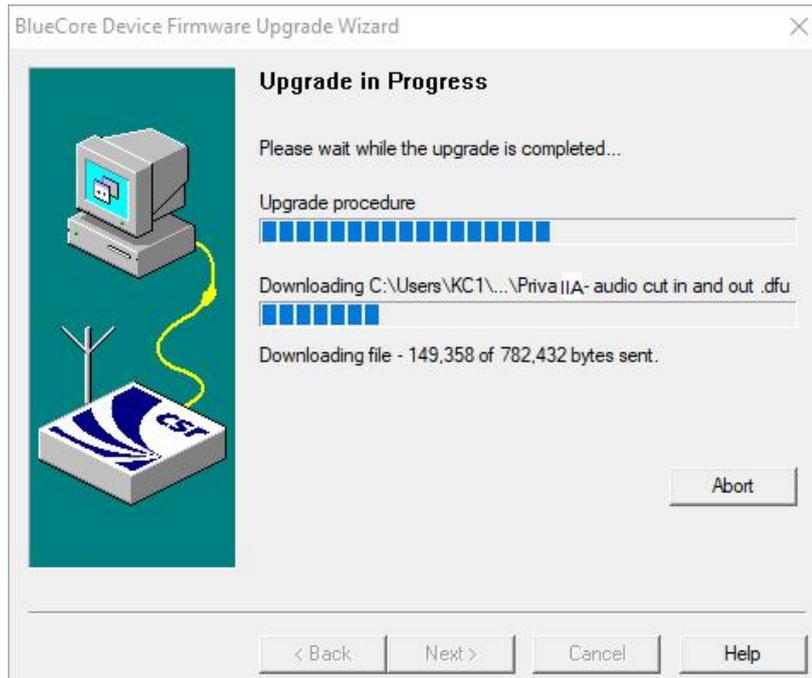

8) After successful upgrade, click "Finish" as below.

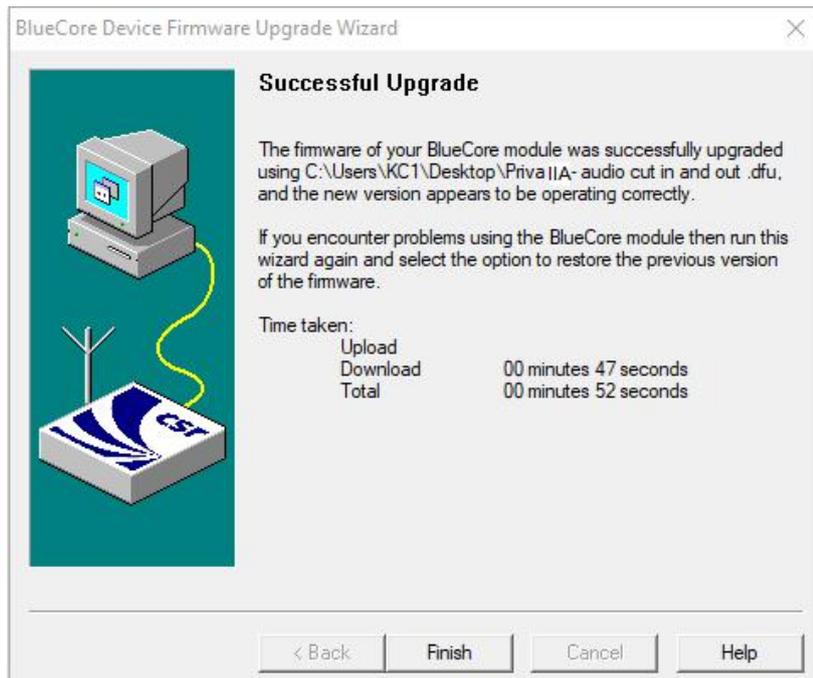

At the same time, Priva IIA enter re-connection mode automatically, LED flashes **BLUE** once per 2s.