



1. Install the **InstallBlueSuite_2_6_9_1584** software on your PC(remember its installation path).

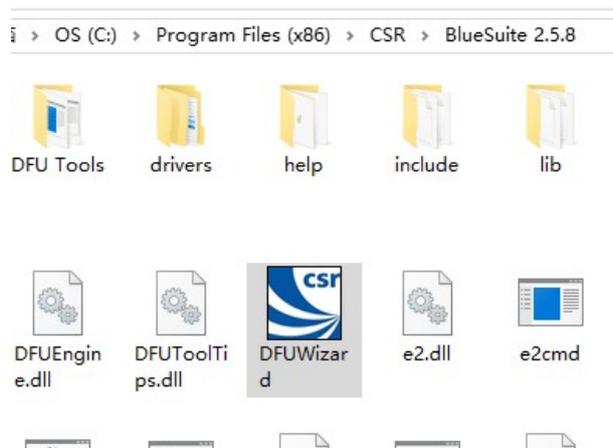


2. Restart your PC after it is successfully installed.
3. Connect Audikast Plus(TC418P) to PC via micro data/charging cable(included) => switch button to ON => press and hold **BOTH** Button A and Button B for 15s,  close to Both Button A and Button B is on **PINK**, now Audikast Plus enter DFU mode.
4. Upgrade Audikast Plus
 - 1) Find "**InstallBlueSuite_2_6_9_1584**" from its installation path on your computer, select "DFUWizard" and click.



- 2) Click Next.

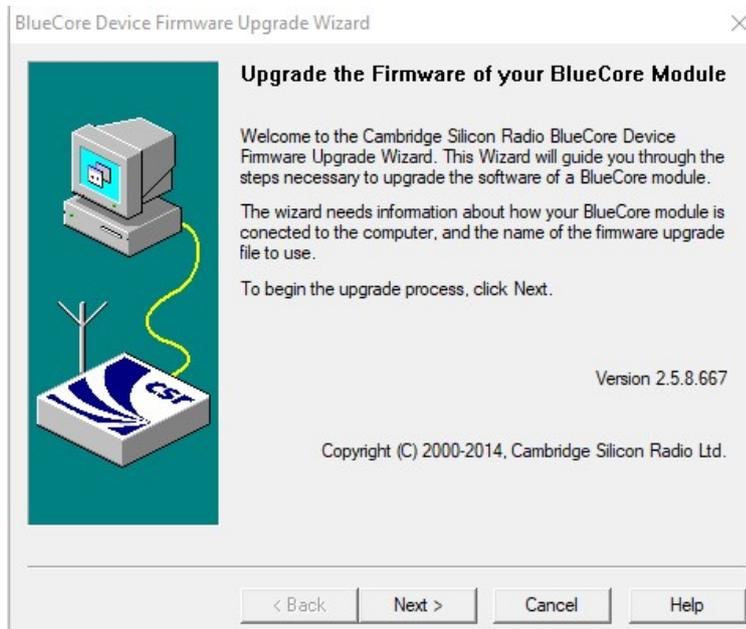


3) Select the first one as below and click Next.

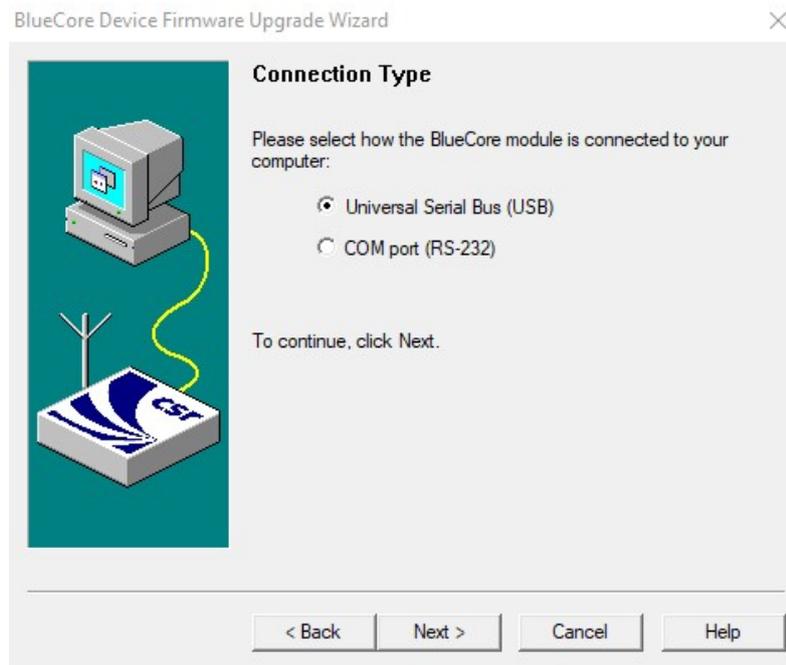


4) Select the **second** one as below and click Next directly.


NOTE: If your computer is default as first one and can't switch to other options, then please **don't** click "change" to back up as it may cause **firmware corrupt**.

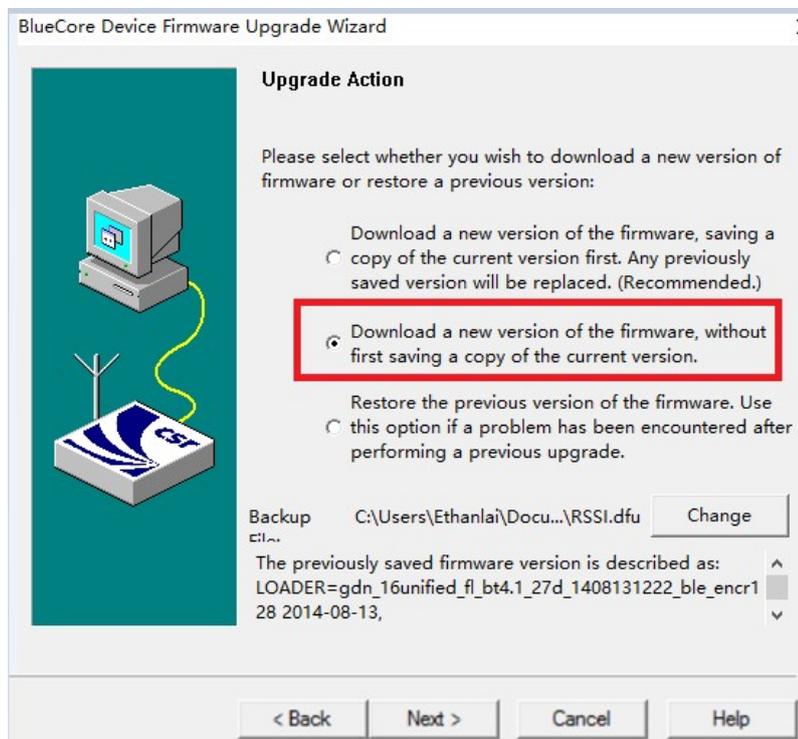


5) Click "Browse" , select "TC418P - V1.57 .dfu" , then click "Next" .

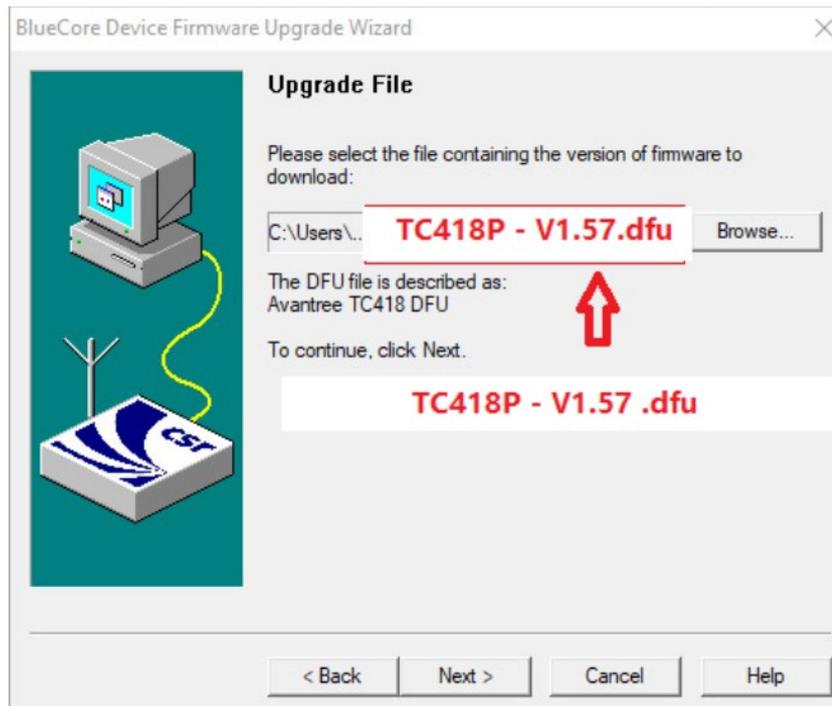

6) Click "Next"

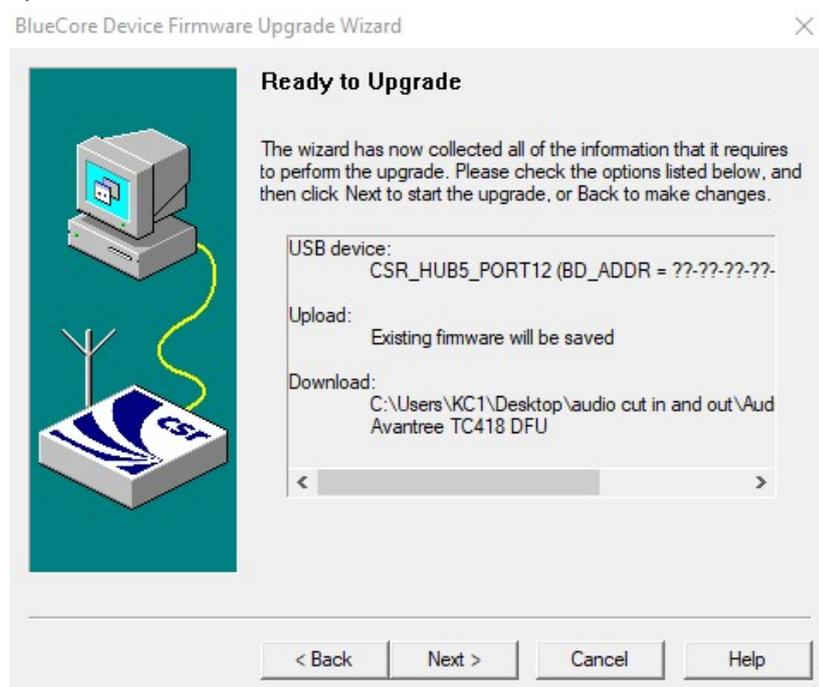

7) Waiting for upgrading

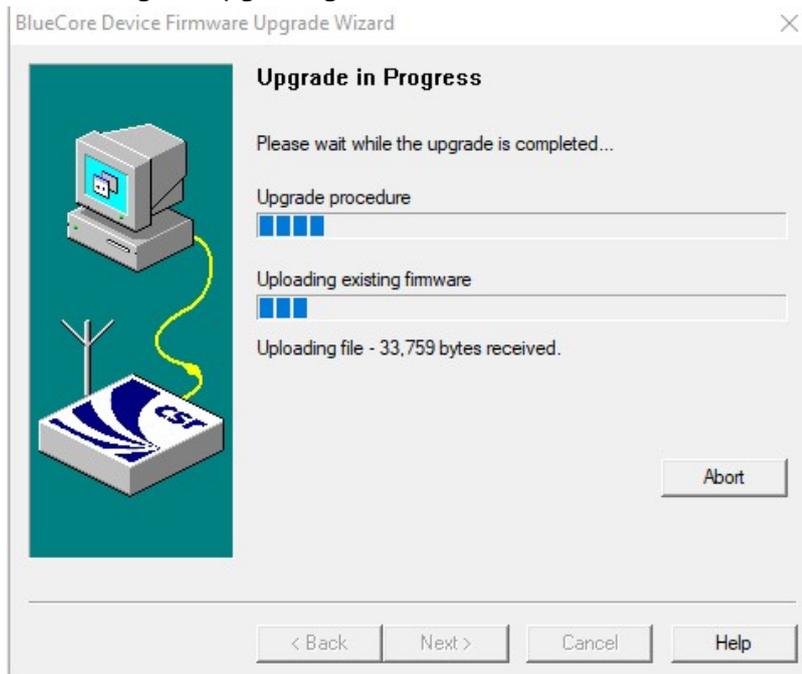

After successful upgrade, click "Finish" as below.

